


PRE-PLANTING SETUP (CONTINUED)

AFS PRO 1200 PRESCRIPTION SETUP


This example uses a Shapefile import. You can also import prescriptions from the AFS Connect Farm Portal in a similar manner.

1. Create a folder on a USB transfer device titled SHAPEFILE and place all prescription files in that folder.
2. Insert USB in Pro1200 and navigate to **MENU>DATA>IMPORT**

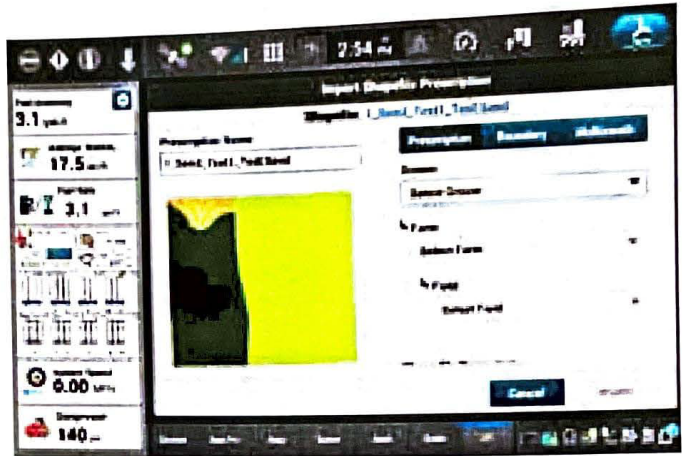


3. Define the data type by selecting Prescription once the file name is populated in the File Name field
4. Assign the Rx to the Grower/Farm/Field
5. Confirm Prescription Form (Seed or Liquid)
6. Confirm Rate (ksds or sds/acre)
7. Select IMPORT

Navigate back to the OPERATIONS menu.




Field Information
Vehicle and Implement Information
Guidance Management
Product Assignment

Product Assignment

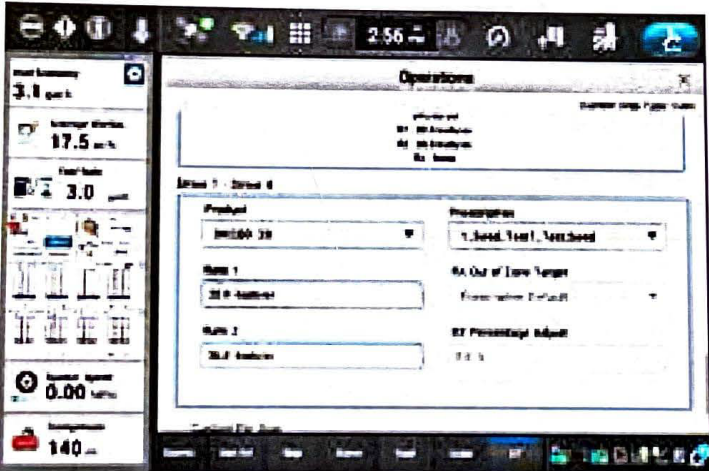

Scroll down to the Product Assignment field and select the PRESCRIPTION field and ensure the Rx is loaded.


It is also recommended that an RX Out of Zone Target is entered to ensure seed or liquid is applied if boundaries do not match actual field area.

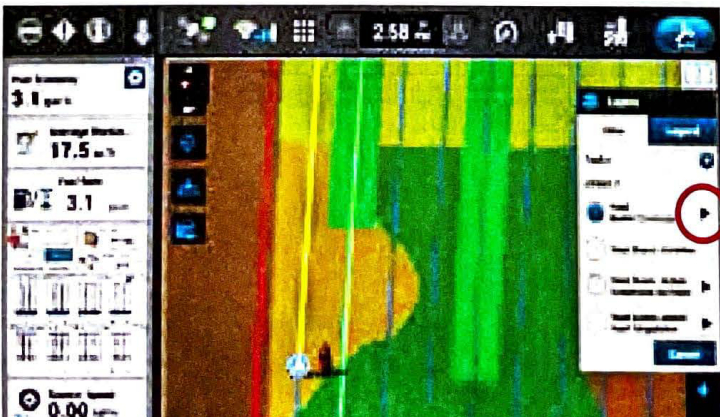

Prescriptions can be viewed as a "background" layer on the map screens with in the Pro1200. To activate the background layer, navigate to the map screen and select the right arrow on the map layer selection pane.

Enable the background slider and select Rx.

The background layer will need to be enabled for each layer selected and visualized.



52 • 2000 Series Early Riser® Planters with AFS Pro 1200 Display